


## SAAB - 96 (1960-1979)

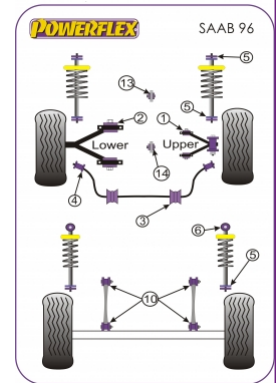

### Notes:

- PFF 66405 may not fit all aftermarket shock absorbers





### PRODUCT PRICING INFORMATION






The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Upper Arm Bush	4	1	PFF 66401	
 Front Wishbone Lower Bush	4	2	PFF 66402	
 Front Anti Roll Bar Mounting Bush 12.7mm	2	3	PFF 6640612.7	
 Front Anti Roll Bar To Wishbone Mounting Bush	2	4	PFF 66407	

	<b>Shock Mounting</b>	<b>6</b>	<b>5</b>	<b>PFF 66425</b>
	<b>Rear Shock Top Mount</b>	<b>2</b>	<b>6</b>	<b>PFF 66405</b>
	<b>Rear Trailing Arm Bush</b>	<b>4</b>	<b>10</b>	<b>PFR 66414</b>
	<b>Engine Stay Mounting Bush</b>	<b>1</b>	<b>13</b>	<b>PFF 66413</b>
	<b>Gearbox Stay Mounting Bush</b>	<b>1</b>	<b>14</b>	<b>PFF 66413</b>