



LEON & CUPRA MK1 TYP 1M 4WD (1999-2005)


The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price



A Powerflex Handling Pack is now available for this vehicle. Please click [here](#) for more information

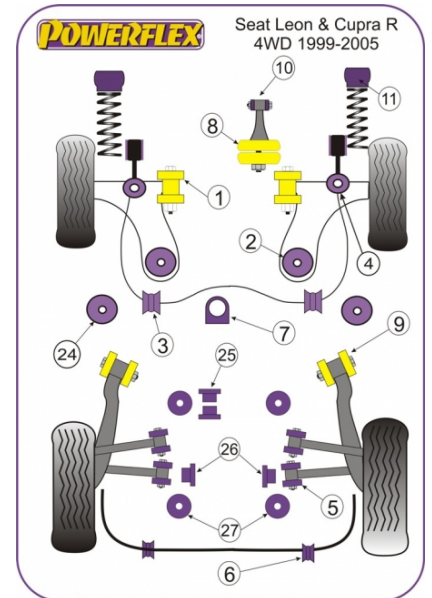

Notes

- For pressed steel front wishbones use PFF 85201 & PFF 85410
- For cast wishbones use PFF 85201 or PFF 3501 & PFF 3610.
- On cast wishbones the later cars have a larger 45mm bush, in this case please use PFF 3501.
- For earlier cars with a 30mm bush please use PFF 85201.
- PFF 85414 Is for Race use and is a rose joint type bush, it fits both pressed steel and cast wishbones
- PFR 3510G offers on-car Camber adjustment, for non adjustable bush use PFR 3510



Pressed Steel Wishbone



Cast Wishbone

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.



POWERFLEX HANDLING PACK (PETROL ONLY)

Qty Per Car **1**

Diagram Ref.

Part No. **PF3K-1002**



FRONT WISHBONE FRONT BUSH, CAST ARM, 45MM OD

Qty Per Car **2**

Diagram Ref. **1**

Part No. **PFF 3501**



FRONT WISHBONE REAR BUSH, CAST ARM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 3610**



FRONT WISHBONE REAR BUSH, PRESSED ARM

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 85410**



FRONT WISHBONE REAR BUSH (RACE USE)

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 85414**



FRONT ANTI ROLL BAR MOUNT 18MM

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF 8541118**



FRONT ANTI ROLL BAR MOUNT 21MM

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF 8541121**



FRONT ANTI ROLL BAR MOUNT 23MM

Qty Per Car **2**

Diagram Ref. **3**

Part No. **PFF 8541123**



FRONT ANTI ROLL BAR LINK BUSH KIT

Qty Per Car **2**

Diagram Ref. **4**

Part No. **PFF 85412**



REAR ARM INNER BUSH

Qty Per Car **4**

Diagram Ref. **5**

Part No. **PFR 3510**



REAR ARM INNER BUSH CAMBER ADJUSTABLE

Qty Per Car **4**

Diagram Ref. **5**

Part No. **PFR 3510G**



STEERING RACK MOUNT BUSH

Qty Per Car **1**

Diagram Ref. **7**

Part No. **PFF 85416**



FRONT ENGINE MOUNT DOG BONE

Qty Per Car **1**

Diagram Ref. **8**

Part No. **PFF 85420**



FRONT ENGINE MOUNT DOG BONE (DIESEL)

Qty Per Car **1**

Diagram Ref. **8**

Part No. **PFF 85420R**



REAR TRAILING ARM FRONT BUSH

Qty Per Car **2**

Diagram Ref. **9**

Part No. **PFR 3508**



FRONT WISHBONE REAR BUSH

Qty Per Car **2**

Diagram Ref. **2**

Part No. **PFF 85410PA**



REAR TRAILING ARM FRONT BUSH TOE ADJUST

Qty Per Car **2**

Diagram Ref. **9**

Part No. **PFR 3508G**



FRONT ENGINE MOUNT DOG BONE SMALL BUSH

Qty Per Car **1**

Diagram Ref. **10**

Part No. **PFF 85505**



FRONT STRUT TOP MOUNT BUSH

Qty Per Car **2**

Diagram Ref. **11**

Part No. **PFF 85430**



FRONT STRUT TOP MOUNT BUSH -10MM

Qty Per Car **2**

Diagram Ref. **11**

Part No. **PFF 85431**



FRONT SUBFRAME REAR BUSH

Qty Per Car **2**

Diagram Ref. **24**

Part No. **PFF 85424**



REAR DIFF FRONT MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **25**

Part No. **PFR 85425**



REAR DIFF REAR MOUNTING BUSH

Qty Per Car **2**

Diagram Ref. **26**

Part No. **PFR 85426**



REAR SUBFRAME MOUNTING BUSH

Qty Per Car **4**

Diagram Ref. **27**

Part No. **PFR 85427**



BUMP STOP KIT

Qty Per Car **1**

Diagram Ref.

Part No. **BS 2006K**
