


## SUBARU - FORESTER (SH 05/08 ON)

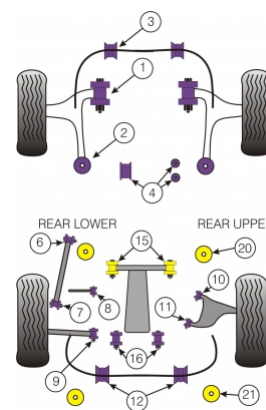

### Notes

- PFR 69714 fits models upto 06/2010
- PFR 69720 & PFR 69721 fit models 06/2010 onwards




### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Arm Front Bush</b>	2	1	<b>PFF 69501</b>	
 <b>Anti Lift, Caster ADJUSTABLE Front Arm Rear Bush</b> Click for fitting instructions	2	2	<b>PFF 69505G</b>	
 <b>Front Anti Roll Bar Bush 18mm</b>	2	3	<b>PFF 6950318</b>	

	<b>Front Anti Roll Bar Bush 20mm</b>	2	3	<b>PFF 6950320</b>
	<b>Front Anti Roll Bar Bush 21mm</b>	2	3	<b>PFF 6950321</b>
	<b>Steering Rack Mounting Kit</b>	1	4	<b>PFF 69504</b>
	<b>Rear Trailing Arm Front Bush</b> 🔧 Click for fitting instructions	2	6	<b>PFR 69506</b>
	<b>Rear Trailing Arm Rear Bush</b> 🔧 Click for fitting instructions	2	7	<b>PFR 69507</b>
	<b>Rear Toe Adjuster Inner Bush</b>	2	8	<b>PFR 69508</b>
	<b>Rear Lower Track Control Inner Bush</b>	2	9	<b>PFR 69509</b>
	<b>PowerAlign Camber Bolt Kit (14mm)</b> 🔧 Click for fitting instructions	1		<b>PFA100-14</b>
	<b>Rear Upper Arm Inner Front Bush</b> 🔧 Click for fitting instructions	2	10	<b>PFR 69510</b>
	<b>Rear Upper Arm Inner Front Bush ADJUSTABLE</b> 🔧 Click for fitting instructions	2	10	<b>PFR 69510G</b>
	<b>Rear Upper Arm Inner Rear Bush</b> 🔧 Click for fitting instructions	2	11	<b>PFR 69511</b>
	<b>Rear Upper Arm Inner Rear Bush ADJUSTABLE</b> 🔧 Click for fitting instructions	2	11	<b>PFR 69511G</b>
	<b>Rear Anti Roll Bar Bush 16mm</b>	2	12	<b>PFR 6951216</b>
	<b>Rear Anti Roll Bar Bush 18mm</b>	2	12	<b>PFR 6951218</b>
	<b>Rear Anti Roll Bar Bush 20mm</b>	2	12	<b>PFR 6951220</b>
	<b>Rear Diff Front Mounting Bush</b>	2	15	<b>PFR 69515</b>
	<b>Rear Diff Rear Mounting Bush</b> 🔧 Click for fitting instructions	2	16	<b>PFR 69516</b>
	<b>Rear Subframe Bush Insert upto 06/10</b>	4	20, 21	<b>PFR 69714</b>
	<b>Rear Subframe Front Bush Insert 06/10 on</b> 🔧 Click for fitting instructions	2	20	<b>PFR 69720</b>
	<b>Rear Subframe Rear Bush Insert 06/10 on</b> 🔧 Click for fitting instructions	2	21	<b>PFR 69721</b>