


SUBARU - FORESTER SG (2002-2008)

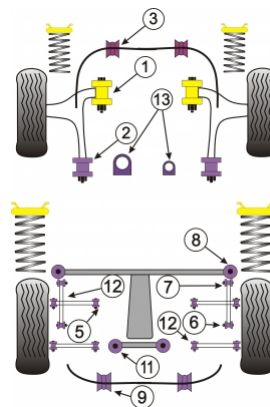

Notes

- Front wishbones can be steel or alloy. Our bushes will fit both
- The front of the two rear tie bars on each side has a smaller sleeve bush on the inner end next to the diff. For one rear tie bar car kit order 6 x PFR 69110 & PFR 69111
- PFF 69107 will only fit Impreza's with pressed steel lower arms
- PFR 69122's are for rear diffs that mount directly to the subframe
- PFF 69102G is Geometry Adjustable and allows +/-0.33 degrees of Caster adjustment


PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

| Bush description | Quantity Per Car | Diagram Reference | Part Number | Retail Price Each |
|--|------------------|-------------------|------------------|-------------------|
|  Front Wishbone Front Bush | 2 | 1 | PFF 69201 | |

| | | | | |
|---|--|---|----|--------------------|
|  | Front Wishbone Rear Bush | 2 | 2 | PFF 69102 |
|  | Front Arm Rear Bush - Caster Adjust 🔧 Click for fitting instructions | 2 | 2 | PFF 69102G |
|  | Front Anti Roll Bar Bush | 2 | 3 | PFF 6920518 |
|  | Front Anti Roll Bar Bush | 2 | 3 | PFF 6920519 |
|  | Front Anti Roll Bar Bush | 2 | 3 | PFF 6920520 |
|  | Front Anti Roll Bar Bush | 2 | 3 | PFF 6920522 |
|  | Front Anti Roll Bar Bush | 2 | 3 | PFF 6920523 |
|  | Rear Tie Bar Bush | 2 | 5 | PFR 69111 |
|  | Rear Tie Bar To Hub Rear Bush | 2 | 6 | PFR 69115 |
|  | Rear Tie Bar To Hub Front Bush | 2 | 7 | PFR 69117 |
|  | Rear Subframe-Front Outrigger To Chassis Left Side | 1 | 8 | PFR 69118 |
|  | Rear Subframe-Front Outrigger To Chassis Right Side 🔧 Click for fitting instructions | 1 | 8 | PFR 69124 |
|  | Rear Anti Roll Bar To Chassis Bush 15mm | 2 | 9 | PF 6930315 |
|  | Rear Anti Roll Bar To Chassis Bush 17mm | 2 | 9 | PF 6930317 |
|  | Rear Anti Roll Bar To Chassis Bush 18mm | 2 | 9 | PF 6930318 |
|  | Rear Anti Roll Bar To Chassis Bush 19mm | 2 | 9 | PF 6930319 |
|  | Rear Anti Roll Bar To Chassis Bush 20mm | 2 | 9 | PF 6930320 |
|  | PowerAlign Camber Bolt Kit (14mm) 🔧 Click for fitting instructions | 1 | | PFA100-14 |
|  | Rear Diff Mount | 2 | 11 | PFR 69122 |
|  | Rear Tie Bar Bush | 6 | 12 | PFR 69110 |
|  | Steering Rack Mount Bushes | 1 | 13 | PFF 69109K |
|  | Exhaust Mounts | 1 | | EXH 009 |

