


SUBARU - IMPREZA TURBO, WRX & STI (GD,GG 00 TO 07)

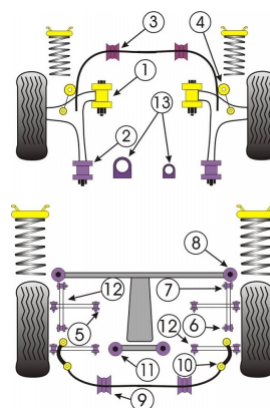

Notes

- Front wishbones can be steel or alloy. Our bushes will fit both
- The front of the two rear tie bars on each side has a smaller sleeve bush on the inner end next to the diff. For one rear tie bar car kit order 6 x PFR 69110 & PFR 69111
- PFF 69107 will only fit Impreza's with pressed steel lower arms
- PFR 69122's are for rear diffs that mount directly to the subframe
- PFF 69102G is Geometry Adjustable and allows +/-0.33 degrees of Caster adjustment
- For Rear Anti Roll Bar Bushes Use PF 69303-* upto 10/02, PFR 69305-* 11/02 on
- PFF 69109K Fits years 2000 to 2004 only ([click here](#) to confirm correct type)



PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.







To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Front Bush	2	1	PFF 69201	
 Front Wishbone Rear Bush	2	2	PFF 69102	

	Front Arm Rear Bush - Caster Adjust Click for fitting instructions	2	2	PFF 69102G
	Front Anti Roll Bar Bush	2	3	PFF 6920518
	Front Anti Roll Bar Bush	2	3	PFF 6920519
	Front Anti Roll Bar Bush	2	3	PFF 6920520
	Front Anti Roll Bar Bush	2	3	PFF 6920522
	Front Anti Roll Bar Bush	2	3	PFF 6920523
	Front Anti Roll Bar End Link	2	4	PFF 69107
	Rear Tie Bar Bush	2	5	PFR 69111
	Rear Tie Bar To Hub Rear Bush	2	6	PFR 69115
	Rear Tie Bar To Hub Front Bush	2	7	PFR 69117
	Rear Subframe-Front Outrigger To Chassis Left Side	1	8	PFR 69118
	Rear Subframe-Front Outrigger To Chassis Right Side Click for fitting instructions	1	8	PFR 69124
	Rear Anti Roll Bar To Chassis Bush 15mm	2	9	PF 6930315
	Rear Anti Roll Bar To Chassis Bush 17mm	2	9	PF 6930317
	Rear Anti Roll Bar To Chassis Bush 18mm	2	9	PF 6930318
	Rear Anti Roll Bar To Chassis Bush 19mm	2	9	PF 6930319
	Rear Anti Roll Bar To Chassis Bush 20mm	2	9	PF 6930320
	Rear Anti Roll Bar To Chassis Bush 14mm	2	9	PFR 6930514
	Rear Anti Roll Bar To Chassis Bush 17mm	2	9	PFR 6930517
	Rear Anti Roll Bar To Chassis Bush 18mm	2	9	PFR 6930518
	Rear Anti Roll Bar To Chassis Bush 19mm	2	9	PFR 6930519
	Rear Anti Roll Bar To Chassis Bush 20mm	2	9	PFR 6930520

	PowerAlign Camber Bolt Kit (14mm) Click for fitting instructions	1		PFA100-14
	Rear Roll Bar Link Bush	4	10	PFR 69119
	Rear Diff Mount	2	11	PFR 69122
	Rear Tie Bar Bush	6	12	PFR 69110
	Steering Rack Mount Bushes	1	13	PFF 69109K
	Exhaust Mounts	1		EXH 009