


VOLKSWAGEN - GOLF MODELS - GOLF MK2 (1985 - 1992) - 2WD

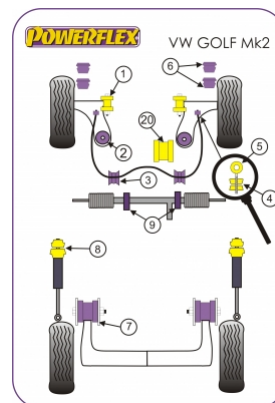

Notes

- For power steering mount bushes please measure the width of bracket and select the correct part number.
- PFF 85232 is suitable for vehicles with a 18.5mm wide bracket.
- PFF 85233 is suitable for vehicles with a 15mm wide bracket.
- PFF 85244 & PFF 85245 don't fit vehicles with engine codes KR, PL, 9A and PG fitted with a hydro type mounting bush




PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price


In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Front Bush	2	1	PFF 85201	
 Front Wishbone Inner Bush	2	2	PFF 85203	
 Front Anti Roll Bar Mount 18mm	2	3	PFF 85205	

	Front Anti Roll Bar Bush 20mm	2	3	PFF 8520520
	Front Anti Roll Bar Bush Eibach 22mm	2	3	PFF 8520522
	Front Eye Bolt Mounting Bush	2	4	PFF 85208
	Front Eye Bolt Mounting Bush 10mm	2	4	PFF 8520810
	Front Anti Roll Bar Eye Bolt Bush 18mm	2	5	PFF 85209
	Front Anti Roll Bar Eye Bolt Bush 20mm	2	5	PFF 8520920
	Front Anti Roll Bar Eye Bolt Bush Eibach 22mm	2	5	PFF 8521022
	Front Subframe Mounts	4	6	PFF 85250
	Rear Lower Engine Mount Bush	1	20	PFF 85244
	Rear Lower Engine Mount Bush, Diesel	1	20	PFF 85244R
	Rear Lower Engine Mount Insert	1	20	PFF 85245
	Rear Lower Engine Mount Insert, Diesel	1	20	PFF 85245R
	Rear Beam Mounting Bush	2	7	PFR 85207
	Rear Shock Top Mounting Bush	2	8	PFR 85240
	Non Power Steering Rack Mount	2	9	PFF 85231
	Power Steering Rack Mount	1	9	PFF 85232
	Power Steering Rack Mount	1	9	PFF 85233
	Exhaust Mounts	1		EXH 006
	Bump Stop Front	2		BS 006
	PowerAlign Camber Bolt Kit (12mm) 🔗 Click for fitting instructions	1		PFA 10012
	Bump Stop Rear	2		BS 008
	Bump Stop Kit 🔗 Click for fitting instructions	1		BS 2001K



Bump Stop Kit

 [Click for fitting instructions](#)

1

BS 2005K