


## VOLKSWAGEN - GOLF MODELS - GOLF MK2 (1985 - 1992) - 4WD

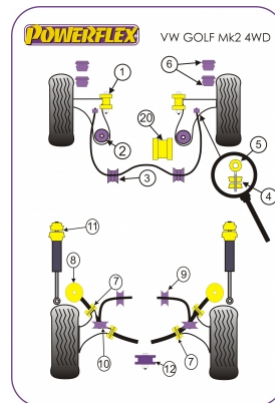

### Notes

- PFF 85244 & PFF 85245 don't fit vehicles with engine codes KR, PL, 9A and PG fitted with a hydro type mounting bush




### PRODUCT PRICING INFORMATION

























The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Wishbone Front Bush</b>	2	1	<b>PFF 85201</b>	
 <b>Front Wish Bone Rear Bush</b>	2	2	<b>PFF 85265</b>	
 <b>Front Anti Roll Bar Mount 18mm</b>	2	3	<b>PFF 85205</b>	

	Front Anti Roll Bar Mount 20mm	2	3	PFF 8520520
	Front Eye Bolt Mounting Bush	2	4	PFF 85208
	Front Eye Bolt Mounting Bush 10mm	2	4	PFF 8520810
	Front Anti Roll Bar Eye Bolt Bush 18mm	2	5	PFF 85209
	Front Anti Roll Bar Eye Bolt Bush 20mm	2	5	PFF 8520920
	Front Subframe Mounts	4	6	PFF 85250
	Rear Lower Engine Mount Bush	1	20	PFF 85244
	Rear Lower Engine Mount Bush, Diesel	1	20	PFF 85244R
	Rear Lower Engine Mount Insert	1	20	PFF 85245
	Rear Lower Engine Mount Insert, Diesel	1	20	PFF 85245R
	Rear Trailing Arm Bush	4	7	PFR 85262
	Rear Beam Mounting Bush	2	8	PFR 85260
	Rear Anti Roll Bar Inner Bush 18.5mm	2	9	PFR 85263
	Rear Anti Roll Bar Inner Bush 20mm	2	9	PFR 8526320
	Rear Anti Roll Bar Outer Mount 18.5mm	2	10	PFR 85264
	Rear Anti Roll Bar Outer Mount 20mm	2	10	PFR 8526420
	Rear Shock Top Mounting Bush	2	11	PFR 85240
	Rear Diff Rear Mounting Bush	1	12	PFR 85270
	Bump Stop Front	2		BS 006
	PowerAlign Camber Bolt Kit (12mm)  Click for fitting instructions	1		PFA 10012
	Exhaust Mounts	1		EXH 006
	Bump Stop Kit  Click for fitting instructions	1		BS 2001K

