


## VOLKSWAGEN - GOLF MODELS - GOLF MK3 (1992 - 1998) - GOLF MK3 2WD (1992 - 1998)

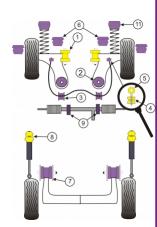



## **Notes**

- PFF 85208 & PFF 85209 Will Not Fit The VR6 Models
- For power steering mount bushes please measure the width of bracket and select the correct part number.
- PFF 85232 is suitable for vehicles with a 18.5mm wide bracket.
- PFF 85233 is suitable for vehicles with a 15mm wide bracket.
- PFF 85239 is suitable for Golf Mk3 models from 1992 to 1996 with 5 stud wheels only, this includes GTi, GTi 16v & VR6. From 1996 to 1998 they fit all Mk3 Golfs.
- PFR 85206 not suitable for Variant (Estate) models.

## PRODUCT PRICING INFORMATION

The prices shown on our website are <u>per bush</u>.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

## Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

| Bush description          | Quantity<br>Per Car | Diagram<br>Reference | Part<br>Number | Retail Price<br>Each |
|---------------------------|---------------------|----------------------|----------------|----------------------|
| Front Wishbone Front Bush | 2                   | 1                    | PFF 8520       | 1                    |

|           | Front Wishbone Rear Bush Click for fitting instructions           | 2 | 2 PFF 85204   |
|-----------|---|---|---------------|
| 95        | Front Anti Roll Bar Mount 18mm                                    | 2 | 3 PFF 85205   |
|           | Front Anti Roll Bar Mount 20mm                                    | 2 | 3 PFF 8520520 |
|           | Front Eye Bolt Mounting Bush                                      | 2 | 4 PFF 85208   |
|           | Front Eye Bolt Mounting Bush 10mm                                 | 2 | 4 PFF 8520810 |
|           | Front Anti Roll Bar Eye Bolt Bush 18mm                            | 2 | 5 PFF 85209   |
| 9         | Front Anti Roll Bar Eye Bolt Bush 20mm                            | 2 | 5 PFF 8520920 |
|           | Front Subframe Mounts   | 4 | 6 PFF 85250   |
| -         | Rear Beam Mounting Bush   | 2 | 7 PFR 85206   |
| <b>*</b>  | Rear Shock Top Mounting Bush                                      | 2 | 8 PFR 85240   |
|           | Non Power Steering Rack Mount                                     | 2 | 9 PFF 85231   |
|           | Power Steering Rack Mount   | 1 | 9 PFF 85232   |
|           | Power Steering Rack Mount   | 1 | 9 PFF 85233   |
|           | Front Strut, Top Mount  | 2 | 11 PFF 85239  |
|           | Bump Stop Front   | 2 | BS 006        |
|           | PowerAlign Camber Bolt Kit (12mm)  Click for fitting instructions | 1 | PFA 10012     |
| <b>Ve</b> | Exhaust Mounts  | 1 | EXH 006       |
|           | Bump Stop Rear  | 2 | BS 008        |
|           | Bump Stop Kit Click for fitting instructions                      | 1 | BS 2001K      |
|           | Bump Stop Kit Click for fitting instructions                      | 1 | BS 2005K      |
|           |   |   |               |