


## VOLKSWAGEN - GOLF MODELS - GOLF MK4 (1997 - 2006) - 2WD TYP 1J

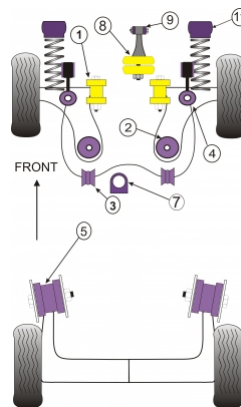

### Notes

- PFF 85414 is a Rose Jointed Bush For Motorsport Use





### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

| Bush description   | Quantity Per Car | Diagram Reference | Part Number        | Retail Price Each |
|--|------------------|-------------------|--------------------|-------------------|
|  <b>Front Wishbone Front Bush</b>   | 2                | 1                 | <b>PFF 85201</b>   |                   |
|  <b>Front Wishbone Rear Bush</b><br>Click for fitting instructions                  | 2                | 2                 | <b>PFF 85410</b>   |                   |
|  <b>Front Wishbone Rear Bush (Motorsport Use)</b><br>Click for fitting instructions | 2                | 2                 | <b>PFF 85414</b>   |                   |
|  <b>Front Anti Roll Bar Mount 19mm</b>  | 2                | 3                 | <b>PFF 8541119</b> |                   |

|   |   |          |           |                    |
|---|---|----------|-----------|--------------------|
|  | <b>Front Anti Roll Bar Mount 21mm</b>   | <b>2</b> | <b>3</b>  | <b>PFF 8541121</b> |
|  | <b>Front Anti Roll Bar Mount 23mm</b>   | <b>2</b> | <b>3</b>  | <b>PFF 8541123</b> |
|  | <b>Front Anti Roll Bar Link Bush Kit</b>  | <b>2</b> | <b>4</b>  | <b>PFF 85412</b>   |
|  | <b>Rear Beam Mounting Bush</b>  | <b>2</b> | <b>5</b>  | <b>PFR 85415</b>   |
|  | <b>Steering Rack Mount Bush</b>   | <b>1</b> | <b>7</b>  | <b>PFF 85416</b>   |
|  | <b>Front Engine Mount Dog Bone</b>  | <b>1</b> | <b>8</b>  | <b>PFF 85420</b>   |
|  | <b>Front Engine Mount Dog Bone (Diesel)</b>                                       | <b>1</b> | <b>8</b>  | <b>PFF 85420R</b>  |
|  | <b>Front Engine Mount Dog Bone Small Bush</b><br>🔧 Click for fitting instructions | <b>1</b> | <b>9</b>  | <b>PFF 85505</b>   |
|  | <b>Front Strut Top Mount Bush</b><br>🔧 Click for fitting instructions             | <b>2</b> | <b>11</b> | <b>PFF 85430</b>   |