


VOLKSWAGEN - LUPO (1999 - 2006)

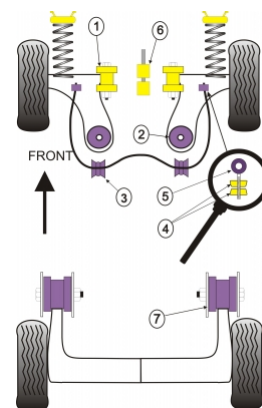

Notes:

- For anti roll bar size measure bar where bush sits as diameter varies along the bar length.
- PFF 8520810, PFF 85209, PFF 8520920, PFF 8540318, PFF 8540320 & PFF 8540322 do not fit the 1.2 3L TDi models or the 1.4 FSi models with chassis codes ANY, AYZ & ARR.
- PFF 85920 does not fit models with engine codes AMF (1.4 diesel) ANY & AYZ (3L TDi)




PRODUCT PRICING INFORMATION










The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Wishbone Inner Bush (front)	2	1	PFF 85401	
 Front Wishbone Rear Bush Click for fitting instructions	2	2	PFF 85402	
 Front Anti Roll Bar Bush 18mm	2	3	PFF 8540318	

	Front Anti Roll Bar Bush 20mm	2	3	PFF 8540320
	Front Anti Roll Bar Bush 22mm	2	3	PFF 8540322
	Front Eye Bolt Mounting Bush 10mm (M8 nut)	2	4	PFF 8520810
	Front Anti Roll Bar Eye Bolt Bush 18mm	2	5	PFF 85209
	Front Anti Roll Bar Eye Bolt Bush 20mm	2	5	PFF 8520920
	Lower Engine Mount Large Bush	1	6	PFF 85920
	Rear Beam Mounting Bush	2	7	PFR 85615
	PowerAlign Camber Bolt Kit (12mm)  Click for fitting instructions	1		PFA 10012