


VOLKSWAGEN - SCIROCCO MK3 13 (2008-)

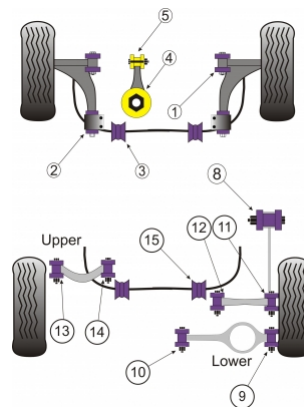

Notes

- PFF 85501G is on-car camber adjustable offering +/-0.5° of adjustment, for a non adjustable bush use PFF 85501.
- PFF 85502G gives 1° of additional caster angle and anti lift properties, the bush is supplied pre fitted into the new bracket, for a bush without geometry adjustment use PFF 85502.
- PFF 85504 fits vehicles upto the middle of 2008, please check the picture of the 2 bushes in order to identify the insert you require.
- PFF 85704 fits vehicles from the middle of 2008 on, please check the picture of the 2 bushes in order to identify the insert you require.



PRODUCT PRICING INFORMATION






















The prices shown on our website are per bush.








To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each

	Front Wishbone Front Bush	2	1	PFF 85501
	Front Wishbone Rear Bush	2	2	PFF 85502
	Front Wishbone Rear Bush Anti-Lift & Caster Adjust Click for fitting instructions	2	2	PFF 85502G
	Front Anti Roll Bar Bush 22mm	2	3	PFF 8550322
	Front Anti Roll Bar Bush 22.5mm	2	3	PFF 8550322.5
	Front Anti Roll Bar Bush 23mm	2	3	PFF 8550323
	Front Anti Roll Bar Bush 23.6mm	2	3	PFF 8550323.6
	Front Anti Roll Bar Bush 24mm	2	3	PFF 8550324
	Lower Engine Mount Insert (Large) Click for fitting instructions	1	4	PFF 85504
	Lower Engine Mount Insert (Large) Track Use Click for fitting instructions	1	4	PFF 85504P
	Lower Engine Mount Insert (Large) Diesel Click for fitting instructions	1	4	PFF 85504R
	Lower Engine Mount Insert (Large) Click for fitting instructions	1	4	PFF 85704
	Lower Engine Mount Insert (Large) Track Use Click for fitting instructions	1	4	PFF 85704P
	Lower Engine Mount Insert (Large) Diesel Click for fitting instructions	1	4	PFF 85704R
	Lower Engine Mount Small Bush Click for fitting instructions	1	5	PFF 85505
	Rear Tie Bar to Chassis Front Bush	2	8	PFR 85508
	Rear Lower Spring Mount Outer	2	9	PFR 85509
	Front Wishbone Front Bush Camber Adjustable Click for fitting instructions	2	1	PFF 85501G
	Rear Lower Spring Mount Inner	2	10	PFR 85510
	Rear Lower Link Outer Bush	2	11	PFR 85511
	Rear Lower Link Inner Bush	2	12	PFR 85512

	Rear Upper Link Outer Bush	2	13	PFR 85513
	Rear Upper Link Inner Bush	2	14	PFR 85514
	Rear Anti Roll Bar Bush 18.5mm	2	15	PFR 8551518.5
	Rear Anti Roll Bar Bush 19.6mm	2	15	PFR 8551519.6
	Rear Anti Roll Bar Bush 20.5mm	2	15	PFR 8551520.5
	Rear Anti Roll Bar Bush 20.7mm	2	15	PFR 8551520.7
	Rear Anti Roll Bar Bush 21.7mm	2	15	PFR 8551521.7