


VOLKSWAGEN - TRANSPORTER T4 (1991 - 2004)

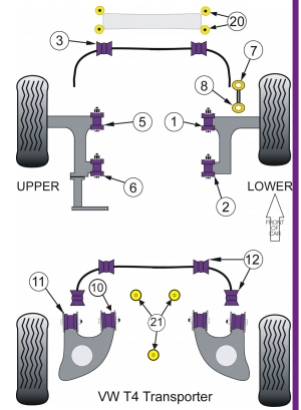

Notes:

- PFF 851101 fits early vehicles 1991-1996
- PFF 851131 fits late vehicles 1997-2004
- PFF 85110423 fits 23mm front anti roll bar from 1991 to 1996
- PFF 85110323 fits 23mm front anti roll bar from 1996 to 2004
- PFF 85110327 fits 27mm front anti roll bar all years
- PFF 851107 not needed for 27mm it only fits 23mm diameter anti roll bars.
- PFF 851120-* Vehicles between 1991 & 1994 use either 8mm or 10mm bolts, please check, later vehicles use 10mm bolts.
- PFR 851020 KIT3 only fits the rear diff on Syncro models


PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Lower Arm Front Bush, upto 1996	2	1	PFF 851101	

	Front Lower Arm Front Bush, from 1997	2	1	PFF 851131
	Front Lower Arm Rear Bush 🔗 Click for fitting instructions	2	2	PFF 851102
	Anti Roll Bar Mount Bush 23mm	2	3	PFF 85110323
	Anti Roll Bar Mount Bush 27mm	2	3	PFF 85110327
	Anti Roll Bar Mount Bush 23mm	2	3	PFF 85110423
	Front Upper Arm Front Bush	2	5	PFF 851105
	Front Upper Arm Rear Bush	2	6	PFF 851106
	23mm Anti Roll Bar To Link Rod Bush	2	7	PFF 851107
	Front Anti Roll Bar Link Rod To Arm Bush 🔗 Click for fitting instructions	2	8	PFF 851108
	Rear Trailing Arm Inner Bush To Chassis	2	10	PFR 851110
	Rear Trailing Arm Outer Bush To Chassis	2	11	PFR 851111
	Rear Anti Roll Bar Bush 20mm	4	12	PFR 85111220
	Rear Anti Roll Bar Bush 26mm	4	12	PFR 85111226
	Rear Anti Roll Bar Bush 28mm	4	12	PFR 85111228
	Front Steering Rack Mount Bush 8mm Bolt	4	20	PFF 8511208
	Front Steering Rack Mount Bush 10mm Bolt	4	20	PFF 85112010
	Diff Mounting Bush Kit Of 3	1	21	PFR 851020 KIT3