


VOLKSWAGEN - TRANSPORTER T5 (2004 -)

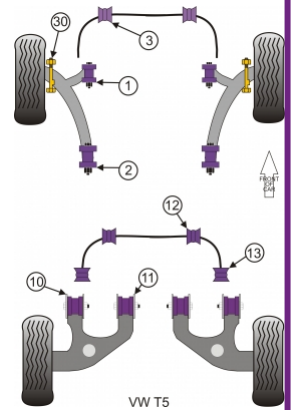

Notes

- PFF 851301G allows on-car Camber adjustment of +/- 0.75 deg. Use PFF 851301 if no adjustment is required
- PFF 851302G allows on-car Caster adjustment of +/- 0.6 deg. Use PFF 851302 if no adjustment is required
- PFR 851310G and PFR85-1311G allows on-car adjustment of +/- 1.0 degree camber and toe. Use PFF 851310 and PFR 851311 if no adjustment is required
- PFA 10014 are camber bolts for additional adjustment, they do not fit vehicles where the front shock absorber slides into the hub it has to have a bracket at the bottom of the shock with 2 bolt fixing to work.


PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 PowerAlign Camber Bolt Kit (14mm) Click for fitting instructions	1		PFA 10014	

	Front Arm Front Bush Click for fitting instructions	2	1	PFF 851301
	Front Arm Front Bush, Camber Adjustable Click for fitting instructions	2	1	PFF 851301G
	Front Arm Rear Bush Click for fitting instructions	2	2	PFF 851302
	Front Arm Rear Bush, Caster Adjustable Click for fitting instructions	2	2	PFF 851302G
	Front Anti Roll Bar Bush 22mm	2	3	PFF 85130322
	Front Anti Roll Bar Bush 23mm	2	3	PFF 85130323
	Front Anti Roll Bar Bush 25mm	2	3	PFF 85130325
	Rear Arm Outer Bush Click for fitting instructions	2	10	PFR 851310
	Rear Arm Outer Bush, Adjustable Click for fitting instructions	2	10	PFR 851310G
	Rear Arm Inner Bush Click for fitting instructions	2	11	PFR 851311
	Rear Arm Inner Bush, Adjustable Click for fitting instructions	2	11	PFR 851311G
	Rear Anti Roll Bar Bush to Chassis 22mm	2	12	PFR 85131222
	Rear Anti Roll Bar Bush to Chassis 24mm	2	12	PFR 85131224
	Rear Anti Roll Bar Bush to Chassis 28mm	2	12	PFR 85131228
	Rear Anti Roll Bar Bush to Arm 22mm	2	13	PFR 85131322
	Rear Anti Roll Bar Bush to Arm 24mm	2	13	PFR 85131324
	Rear Anti Roll Bar Bush to Arm 28mm	2	13	PFR 85131328