


## VOLKSWAGEN - VENTO (1992 - 1998)

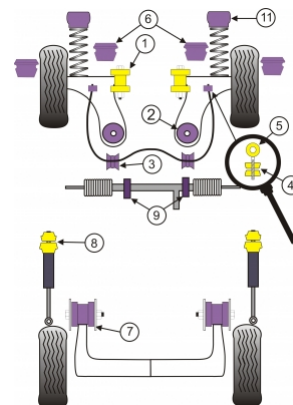

### Notes

- VR6 & GT models with chassis codes AAA, AGG & AKR Do Not Use PFR85-208
- For power steering mount bushes please measure the width of bracket and select the correct part number.
- PFF 85232 is suitable for vehicles with a 18.5mm wide bracket.
- PFF 85233 is suitable for vehicles with a 15mm wide bracket.
- This bush is suitable for Vento models from 1992 to 1996 with 5 stud wheels only. From 1996 to 1998 they fit all models.



### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 <b>Front Wishbone Front Bush</b>	2	1	<b>PFF 85201</b>	
 <b>Front Wishbone Inner Bush (rear)</b> <a href="#">Click for fitting instructions</a>	2	2	<b>PFF 85204</b>	

	<b>Front Anti Roll Bar Mount 18mm</b>	<b>2</b>	<b>3</b>	<b>PFF 85205</b>
	<b>Front Anti Roll Bar Bush 20mm</b>	<b>2</b>	<b>3</b>	<b>PFF 8520520</b>
	<b>Front Eye Bolt Mounting Bush</b>	<b>2</b>	<b>4</b>	<b>PFF 85208</b>
	<b>Front Eye Bolt Mounting Bush 10mm</b>	<b>2</b>	<b>4</b>	<b>PFF 8520810</b>
	<b>Front Anti Roll Bar Eye Bolt Bush 18mm</b>	<b>2</b>	<b>5</b>	<b>PFF 85209</b>
	<b>Front Anti Roll Bar Eye Bolt Bush 20mm</b>	<b>2</b>	<b>5</b>	<b>PFF 8520920</b>
	<b>Front Subframe Mounts</b>	<b>4</b>	<b>6</b>	<b>PFF 85250</b>
	<b>Rear Beam Mounting Bush</b>	<b>2</b>	<b>7</b>	<b>PFR 85206</b>
	<b>Rear Shock Top Mounting Bush</b>	<b>2</b>	<b>8</b>	<b>PFR 85240</b>
	<b>Non Power Steering Rack Mount</b>	<b>2</b>	<b>9</b>	<b>PFF 85231</b>
	<b>Power Steering Rack Mount</b>	<b>1</b>	<b>9</b>	<b>PFF 85232</b>
	<b>Power Steering Rack Mount</b>	<b>1</b>	<b>9</b>	<b>PFF 85233</b>
	<b>Front Strut, Top Mount</b>	<b>2</b>	<b>11</b>	<b>PFF 85239</b>
	<b>Bump Stop Front</b>	<b>2</b>		<b>BS 006</b>
	<b>PowerAlign Camber Bolt Kit (12mm)</b> <a href="#">Click for fitting instructions</a>	<b>1</b>		<b>PFA 10012</b>
	<b>Exhaust Mounts</b>	<b>1</b>		<b>EXH 006</b>
	<b>Bump Stop Rear</b>	<b>2</b>		<b>BS 008</b>
	<b>Bump Stop Kit</b> <a href="#">Click for fitting instructions</a>	<b>1</b>		<b>BS 2005K</b>