


VOLVO - S60 AWD 2002 V70 II AVD 02-

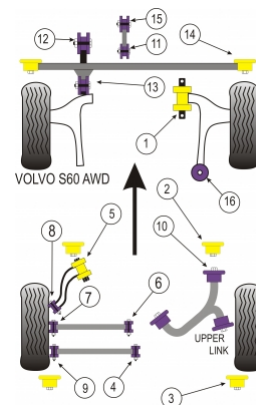

Notes

- PFF 88601 replaces original oil filled bushes only




PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Lower Wishbone Front Bush	2	1	PFF 88601	
 Front Arm Rear Bush	2	16	PFF 88600	
 Rear Beam Front Mounting Bush	2	2	PFR 88602	

	Rear Beam Rear Mounting Bush	2	3	PFR 88603
	Rear Inner Rear Lower Arm	2	4	PFR 88604
	Rear Toe Control Arm Bush Front	2	5	PFR 88605
	Rear Lower Centre Arm Inner	2	6	PFR 88606
	Rear Lower Centre Arm Outer	2	7	PFR 88607
	Rear Toe Control Arm To Hub Bush	2	8	PFR 88608
	Rear Outer Rear Lower Arm	2	9	PFR 88609
	PowerAlign Camber Bolt Kit (14mm)  Click for fitting instructions	1		PFA 10014
	Rear Upper Link Y Arm Front Void Kit	2	10	PFR 88610
	Front Lower Engine Mount Small Bush	1	11	PFF 88611
	Upper Engine Mount Large Round Bush Petrol	1	12	PFF 88612
	Upper Engine Mount Small Bush	1	13	PFF 88613
	Strut Brace Tensioning Kit	2	14	PFF 88614
	Front Lower Engine Mount Large Bush	1	15	PFF 88711