



XC60 (2009 ONWARDS)



The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

- PFF 881030 fits all 5 and 6 cylinders Volvo engines, D3 & D4 2L Diesel engines, T4 2L Petrol engine and 5T 2.5L engines.
- Please check front and rear anti-roll bar size before ordering.

PFF19-1925 FITS LOWER ENGINE MOUNT WITH THIS PROFILE ONLY

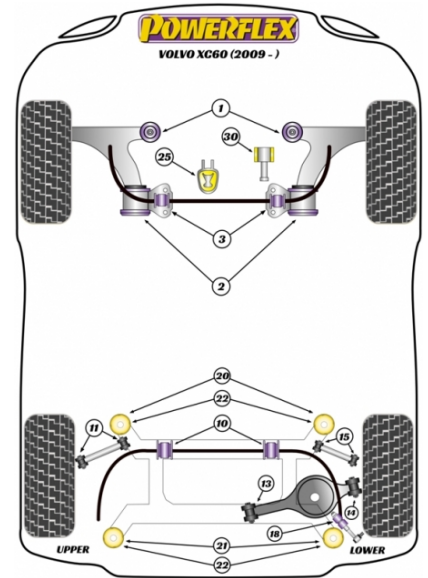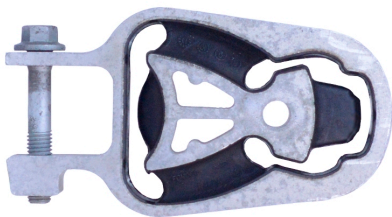

In addition to the Road Series parts listed please check the Black Series website for other bushes suitable for this car that may be more suited to Track/Race use.



FRONT ARM FRONT BUSH

Qty Per Car 2

Diagram Ref. 1

Part No. **PFF 191901**



FRONT ARM REAR BUSH

Qty Per Car 2

Diagram Ref. 2

Part No. **PFF 191902**



FRONT ANTI ROLL BAR TO CHASSIS BUSH 22MM

Qty Per Car 2

Diagram Ref. 3

Part No. **PFF 19160322**



REAR ANTI-ROLL BAR BUSH

Qty Per Car 2

Diagram Ref. 10

Part No. **PFR 19191020.3**



REAR UPPER ARM BUSH

Qty Per Car 4

Diagram Ref. 11

Part No. **PFR 191911**



REAR LOWER ARM INNER BUSH

Qty Per Car 2

Diagram Ref. 13

Part No. **PFR 191913**



REAR LOWER ARM OUTER BUSHQty Per Car **2**Diagram Ref. **14**Part No. **PFR 191914**

**REAR TOE LINK ARM BUSH**Qty Per Car **4**Diagram Ref. **15**Part No. **PFR 191915**

**REAR ANTI ROLL BAR TO LINK ROD BUSH**Qty Per Car **2**Diagram Ref. **18**Part No. **PFR 191918**

**REAR SUBFRAME FRONT BUSH INSERTS**Qty Per Car **2**Diagram Ref. **20**Part No. **PFR 191920**

**REAR SUBFRAME REAR BUSH INSERTS**Qty Per Car **2**Diagram Ref. **21**Part No. **PFR 191921**

**REAR SUBFRAME BUSH**Qty Per Car **4**Diagram Ref. **22**Part No. **PFR 191922**

**LOWER ENGINE MOUNT INSERT**Qty Per Car **1**Diagram Ref. **25**Part No. **PFF 191925**

**TORQUE ROD INSERT**Qty Per Car **1**Diagram Ref. **30**Part No. **PFF 881030**
