


AUDI - COUPE QUATTRO (1985-1996) QUATTRO (1980-1991) QUATTRO SPORT (1984-1985)

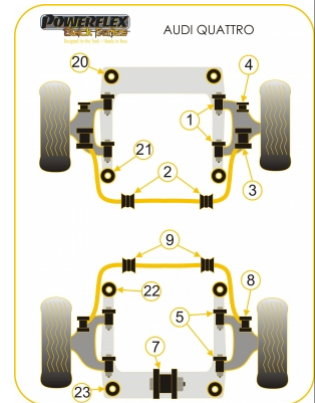

Notes

- PFF3-101 Fits 37mm Pressed Front Arms
- PFF3-102 Fits 45mm Cast Front Arms
- PFF3-104 & PFF3-105 Only Fit Up To 1992 Chassis Number 8A-N-200-000
- PFF3-106-21.5 Fits models where there is no link rod between the anti roll bar and control arm.
- PFR3-1011-21/23.5/25 Front anti roll bar mounts are tear drop shaped
- PFF3-120-10 & PFF3-121-10 fit vehicles with 10mm mounting bolts, vehicles with 12mm bolts use PFF3-120-12 & PFF3-121-12
- PFR3-108-15 & PFR3-1011-15.5 Fits early Quattro and Sport Quattro models UR/WR (1980-1984) when fitted with a rear anti roll bar

PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
------------------	------------------	-------------------	-------------	-------------------

	Front Anti Roll Bar Mount 25mm	2	2	PFR3-1011-25BLK
	Front Wishbone Bush Click for fitting instructions	4	1	PFF3-101BLK
	Front Wishbone Bush Click for fitting instructions	4	1	PFF3-102BLK
	Front Anti Roll Bar Mount 24mm	2	2	PFF3-103-24BLK
	Front Anti Roll Bar Mount 25mm	2	2	PFF3-103-25BLK
	Front Outer Roll Bar Mount Lower 12mm	2	3	PFF3-105-12BLK
	Front Outer Roll Bar Mount Lower 16mm	2	3	PFF3-105BLK
	Front Anti Roll Bar To Control Arm Bush	2	3	PFF3-106-21.5BLK
	Front Outer Roll Bar Mount Upper	2	4	PFF3-104BLK
	Rear Wishbone Bush Click for fitting instructions	4	5	PFF3-101BLK
	Rear Differential Mount	1	7	PFR3-107BLK
	Front Subframe Front Bush 10mm	2	20	PFF3-120-10BLK
	Front Subframe Front Bush 12mm	2	20	PFF3-120-12BLK
	Front Subframe Rear Bush 10mm	2	21	PFF3-121-10BLK
	Front Subframe Rear Bush 12mm	2	21	PFF3-121-12BLK
	Rear Subframe Front Bush 10mm	2	22	PFF3-121-10BLK
	Rear Subframe Front Bush 12mm	2	22	PFF3-121-12BLK
	Rear Subframe Rear Bush 10mm	2	23	PFF3-120-10BLK
	Rear Subframe Rear Bush 12mm	2	23	PFF3-120-12BLK