


AUDI - 80, 90 QUATTRO INC AVANT (1983-1992) S2 COUPE B3 (1991-1996)

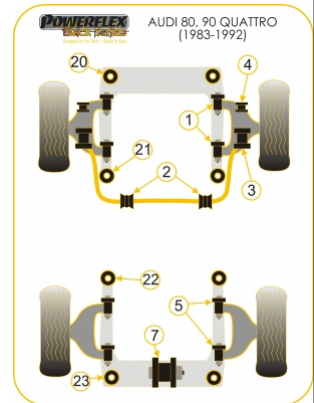

### Notes

- PFF3-101 Fits 37mm Pressed Front Arms
- PFF3-102 Fits 45mm Cast Front Arms
- PFF3-104 & PFF3-105 Only Fit Up To 1992 Chassis Number 8A-N-200-000
- PFF3-106-21.5 Fits models where there is no link rod between the anti roll bar and control arm.
- PFF3-120-10 & PFF3-121-10 fit vehicles with 10mm mounting bolts, vehicles with 12mm bolts use PFF3-120-12 & PFF3-121-12
- PFR3-1011-21/23.5/25 Front anti roll bar mounts are tear drop shaped

### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each

	<b>Front Anti Roll Bar Mount 25mm</b>	2	2	<b>PFR3-1011-25BLK</b>
	<b>Front Wishbone Bush</b> Click for fitting instructions	4	1	<b>PFF3-101BLK</b>
	<b>Front Wishbone Bush</b> Click for fitting instructions	4	1	<b>PFF3-102BLK</b>
	<b>Front Anti Roll Bar Mount 24mm</b>	2	2	<b>PFF3-103-24BLK</b>
	<b>Front Anti Roll Bar Mount 25mm</b>	2	2	<b>PFF3-103-25BLK</b>
	<b>Front Outer Roll Bar Mount Lower 12mm</b>	2	3	<b>PFF3-105-12BLK</b>
	<b>Front Outer Roll Bar Mount Lower 16mm</b>	2	3	<b>PFF3-105BLK</b>
	<b>Front Anti Roll Bar To Control Arm Bush</b>	2	3	<b>PFF3-106-21.5BLK</b>
	<b>Front Outer Roll Bar Mount Upper</b>	2	4	<b>PFF3-104BLK</b>
	<b>Rear Wishbone Bush</b> Click for fitting instructions	4	5	<b>PFF3-101BLK</b>
	<b>Rear Differential Mount</b>	1	7	<b>PFR3-107BLK</b>
	<b>Front Subframe Front Bush 10mm</b>	2	20	<b>PFF3-120-10BLK</b>
	<b>Front Subframe Front Bush 12mm</b>	2	20	<b>PFF3-120-12BLK</b>
	<b>Front Subframe Rear Bush 10mm</b>	2	21	<b>PFF3-121-10BLK</b>
	<b>Front Subframe Rear Bush 12mm</b>	2	21	<b>PFF3-121-12BLK</b>
	<b>Rear Subframe Front Bush 10mm</b>	2	22	<b>PFF3-121-10BLK</b>
	<b>Rear Subframe Front Bush 12mm</b>	2	22	<b>PFF3-121-12BLK</b>
	<b>Rear Subframe Rear Bush 10mm</b>	2	23	<b>PFF3-120-10BLK</b>
	<b>Rear Subframe Rear Bush 12mm</b>	2	23	<b>PFF3-120-12BLK</b>