


BMW - E36 3 SERIES (1990 - 1998)

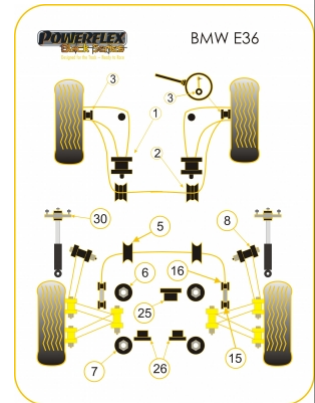

Notes

- PFF5-303 is an eccentric bush for the M3 or where increased castor is required
- PFF5-301 is an concentric bush for non M3 models
- Please check front and rear roll bar size before ordering.
- PFF5-304 is designed to fit models where the Anti Roll Bar joins the lower arm not the shock absorber. This part will not fit the M' versions as a consequence.
- PFR5-5630-10 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR5-5630-12 fits cars with aftermarket rear shock absorbers with a 12mm pin. Neither fit Cabriolet models
- PFR5-324 fits later M3 Evo models where the bush fits into a separate mounting bracket
- PFR5-325 fits all models, (M3 models upto 1996) with the bush in the subframe
- PFR5-326 fits all models including all M3 models

PRODUCT PRICING INFORMATION



The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number	Retail Price Each
 Front Lower Wishbone Rear Bush	2	1	PFF5-301BLK	
 Front Lower Wishbone Rear Bush Eccentric Click for fitting instructions	2	1	PFF5-303BLK	
 Front Anti Roll Bar Mounting 23mm	2	2	PFF5-310-23BLK	
 Front Anti Roll Bar Mounting 24mm	2	2	PFF5-310-24BLK	
 Front Anti Roll Bar Mounting 25mm	2	2	PFF5-310-25BLK	
 Front Anti Roll Bar Mounting 26mm	2	2	PFF5-310-26BLK	
 Front Anti Roll Bar Mounting 27mm	2	2	PFF5-310-27BLK	
 Front Anti Roll Bar Mounting 28mm	2	2	PFF5-310-28BLK	
 Anti Roll Bar Link Rod Bush	2	3	PFF5-304BLK	
 Rear Roll Bar Mounting Bush 15mm	2	5	PFR5-504-15BLK	
 Rear Roll Bar Mounting Bush 18mm	2	5	PFR5-504-18BLK	
 Rear Roll Bar Mounting Bush 19mm	2	5	PFR5-504-19BLK	
 Rear Roll Bar Mounting Bush 20mm	2	5	PFR5-504-20BLK	
 Rear Subframe Front Mounting Bush Click for fitting instructions	2	6	PFR5-3607BLK	
 Rear Subframe Rear Mounting Bush Click for fitting instructions	2	7	PFR5-3606BLK	
 Rear Trailing Arm Front Bush	2	8	PFR5-3608BLK	
 Rear Anti Roll Bar Link To Arm Bush Click for fitting instructions	2	15	PFR5-315BLK	
 Rear Anti Roll Bar Link To Anti Roll Bar Bush Click for fitting instructions	2	16	PFR5-316BLK	
 Rear Diff Front Mounting Bush, M3 Evo Only Click for fitting instructions	1	25	PFR5-324BLK	
 Rear Diff Front Mounting Bush Click for fitting instructions	1	25	PFR5-325BLK	
 Rear Diff Rear Mounting Bush Click for fitting instructions	2	26	PFR5-326BLK	

	Rear Shock Top Mount Bracket and Bush 10mm Click for fitting instructions	2	30	PFR5-5630-10BLK
	Rear Shock Top Mount Bracket and Bush 12mm Click for fitting instructions	2	30	PFR5-5630-12BLK
	Bump Stop Kit Click for fitting instructions	1		BS2003K