

## E36 3 SERIES COMPACT (1993-2000)

## PRICING INFORMATION

The prices shown on our website are per bush. To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

## **Bush Price x Qty Per Car = Pack Price**

## Notes

- PFF5-303 is an eccentric bush for the M3 or where increased caster is required.
- Please check front and rear anti roll bar size before ordering.
- PFF5-304 is designed to fit models where the Anti Roll Bar joins lower arm not the shock absorber.
- For the rear trailing arm use either PFR5-306 or on-car adjustable bushes PFR5-306G.
- PFR5-5630-10 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR5-5630-12 fits cars with aftermarket rear shock absorbers with a 12mm pin.

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.



FRONT LOWER WISHBONE REAR BUSH

Qty Per Car 2

Diagram Ref. 1

Part No. PFF5-301BLK



FRONT LOWER WISHBONE REAR BUSH CASTER OFFSET Qty Per Car 2

Diagram Ref. 1

Part No. PFF5-303BLK




FRONT ANTI ROLL BAR MOUNTING 23MM

Oty Per Car 2

Diagram Ref. 2

Part No. PFF5-310-23BLK

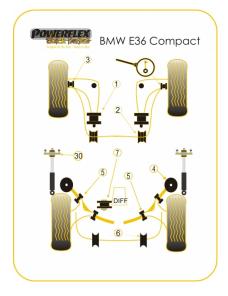

| Powerelex                                       | FRONT ANTI ROLL BAR MOUNTING 24MM |                       |                                |  |
|---|-----------------------------------|-----------------------|--------------------------------|--|
|   | Qty Per Car <b>2</b>              | Diagram Ref. <b>2</b> | Part No. <b>PFF5-310-24BLK</b> |  |
| POWERELEX<br>CHECK STREE                        | FRONT ANTI ROLL E                 |                       |                                |  |
|   | Qty Per Car 2                     | Diagram Ref. <b>2</b> | Part No. <b>PFF5-310-25BLK</b> |  |
| PowerBetex                                      | FRONT ANTI ROLL E                 |                       |                                |  |
|   | Qty Per Car 2                     | Diagram Ref. <b>2</b> | Part No. <b>PFF5-310-26BLK</b> |  |
|   | FRONT ANTI ROLL BAR MOUNTING 27MM |                       |                                |  |
|   | Qty Per Car <b>2</b>              | Diagram Ref. <b>2</b> | Part No. <b>PFF5-310-27BLK</b> |  |
|   | FRONT ANTI ROLL E                 |                       |                                |  |
|   | Qty Per Car <b>2</b>              | Diagram Ref. <b>2</b> | Part No. <b>PFF5-310-28BLK</b> |  |
| POWERLEX  | ANTI ROLL BAR LINK ROD BUSH       |                       |                                |  |
|   | Qty Per Car <b>2</b>              | Diagram Ref. <b>3</b> | Part No. <b>PFF5-304BLK</b>    |  |
| POWERLEX  | REAR BEAM BUSH                    |                       |                                |  |
|   | Qty Per Car <b>2</b>              | Diagram Ref. <b>4</b> | Part No. <b>PFR5-311BLK</b>    |  |
| Powertex  | REAR TRAILING ARM BUSH            |                       |                                |  |
|   | Qty Per Car <b>4</b>              | Diagram Ref. <b>5</b> | Part No. <b>PFR5-306BLK</b>    |  |
| POWERSLEX                                       | REAR TRAILING ARM BUSH ADJUSTABLE |                       |                                |  |
|   | Qty Per Car <b>4</b>              | Diagram Ref. <b>5</b> | Part No. <b>PFR5-306GBLK</b>   |  |
|   | REAR ROLL BAR MOUNTING BUSH 12MM  |                       |                                |  |
|   | Qty Per Car <b>2</b>              | Diagram Ref. <b>6</b> | Part No. <b>PFR5-308-12BLK</b> |  |
| POWERCELEX<br>Cack Solids<br>Red of the the two | REAR ROLL BAR MOUNTING BUSH 14MM  |                       |                                |  |
|   | Qty Per Car <b>2</b>              | Diagram Ref. <b>6</b> | Part No. <b>PFR5-308-14BLK</b> |  |

| POWERFLEX<br>Grack Service<br>Red North Service | REAR ROLL BAR MOUNTING BUSH 16MM           |                        |                                 |  |  |
|---|--|------------------------|---------------------------------|--|--|
|   | Qty Per Car <b>2</b>                       | Diagram Ref. <b>6</b>  | Part No. <b>PFR5-308-16BLK</b>  |  |  |
| POWERLEY  | REAR DIFF MOUNTING BUSH                    |                        |                                 |  |  |
|   | Qty Per Car <b>1</b>                       | Diagram Ref. <b>7</b>  | Part No. <b>PFR5-300BLK</b>     |  |  |
|   | REAR SHOCK TOP MOUNT BRACKET AND BUSH 10MM |                        |                                 |  |  |
|   | Qty Per Car <b>2</b>                       | Diagram Ref. 30        | Part No. <b>PFR5-5630-10BLK</b> |  |  |
| POWERELEX<br>Construction of the sector         | REAR SHOCK TOP                             | MOUNT BRACKET AND BUSH | I 12MM                          |  |  |
|   | Qty Per Car <b>2</b>                       | Diagram Ref. 30        | Part No. <b>PFR5-5630-12BLK</b> |  |  |
|   | BUMP STOP KIT                              |                        |                                 |  |  |
|   | Qty Per Car <b>1</b>                       | Diagram Ref.           | Part No. <b>BS2003K</b>         |  |  |