


BMW - E39 5 SERIES (1996 - 2004) - E39 5 SERIES 535 TO 540 & M5

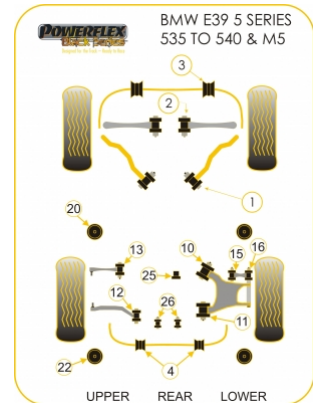

Notes

- PFF5-4602-23/24/25/27 front anti roll bar bush is fitted on models with M Sport II suspension, please click on image and compare to original.
- PFF5-503-225/24/25 front anti roll bar bush fit non M sport suspension models, please click on image and compare to original.
- PFF5-503-27 is fitted to M5 vehicles.
- Use either PFR5-520 and PFR5-522 complete bushes or PFR5-521 and PFR5-523 inserts.


PRODUCT PRICING INFORMATION


The prices shown on our website are per bush.







To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 Front Lower Tie Bar To Chassis Bush Click for fitting instructions	2	1	PFF5-501BLK

	Front Inner Track Control Arm Bush	2	2	PFF5-502BLK
	Front Anti Roll Bar Bush 23mm	2	3	PFF5-4602-23BLK
	Front Anti Roll Bar Bush 24mm	2	3	PFF5-4602-24BLK
	Front Anti Roll Bar Bush 25mm	2	3	PFF5-4602-25BLK
	Front Anti Roll Bar Mounting Bush 27mm	2	3	PFF5-4602-27BLK
	Front Anti Roll Bar Mounting Bush 22.5mm	2	3	PFF5-503-225BLK
	Front Anti Roll Bar Mounting Bush 24mm	2	3	PFF5-503-24BLK
	Front Anti Roll Bar Mounting Bush 25mm	2	3	PFF5-503-25BLK
	Front Anti Roll Bar Mounting Bush 27mm	2	3	PFF5-503-27BLK
	Rear Anti Roll Bar Mounting Bush 13mm	2	4	PFR5-504-13BLK
	Rear Anti Roll Bar Mounting Bush 14mm	2	4	PFR5-504-14BLK
	Rear Roll Bar Mounting Bush 15mm	2	4	PFR5-504-15BLK
	Rear Roll Bar Mounting Bush 16.5mm	2	4	PFR5-504-165BLK
	Rear Lower Arm Front Bush	2	10	PFR5-710-10BLK
	Rear Lower Arm Rear Bush	2	11	PFR5-711-12BLK
	Rear Lower Arm Rear Bush	2	11	PFR5-711BLK
	Rear Upper Arm Inner Bush	2	12	PFR5-712BLK
	Rear Toe Adjust Inner Bush	2	13	PFR5-713BLK
	Rear Outer Integral Link Upper Bush  Click for fitting instructions	2	15	PFR5-715BLK
	Rear Outer Integral Link Lower Bush  Click for fitting instructions	2	16	PFR5-716BLK
	Rear Subframe Front Mounting Bush  Click for fitting instructions	2	20	PFR5-520BLK
	Rear Subframe Mounting Front Insert	2	20	PFR5-521BLK

	Rear Subframe Rear Mounting Bush Click for fitting instructions	2	22	PFR5-522BLK
	Rear Subframe Rear Mounting Insert	2	22	PFR5-523BLK
	Rear Diff Front Mounting Bush Click for fitting instructions	1	25	PFR5-524BLK
	Rear Diff Front Mounting Bush Click for fitting instructions	1	25	PFR5-525BLK
	Rear Diff Rear Mounting Bush Click for fitting instructions	2	26	PFR5-526BLK
	Bump Stop Kit Click for fitting instructions	1		BS2003K