


BMW - E39 5 SERIES (1996 - 2004) - E39 5 SERIES 520 TO 530 TOURING

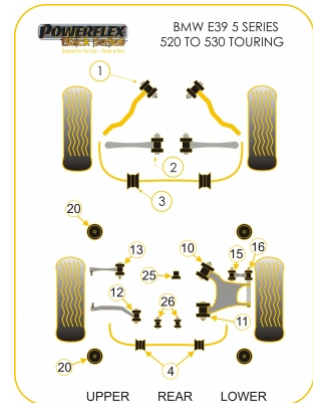

Notes

- PFF5-4602-23/24/25/27 front anti roll bar bush is fitted on models with M Sport II suspension, please click on image and compare to original.
- PFF5-503-225/24/25/27 front anti roll bar bush fit non M sport suspension models, please click on image and compare to original.
- Use either PFR5-530 complete bushes or PFR5-531 inserts.
- Use either PFR5-524 for diffs with a flat mounting face or PFR5-525 if the casing has a spigot.


PRODUCT PRICING INFORMATION




The prices shown on our website are per bush.




To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 Front Lower Tie Bar To Chassis Bush	2	1	PFF5-510BLK

	Front Inner Track Control Arm Bush	2	2	PFF5-511BLK
	Front Anti Roll Bar Bush 24mm	2	3	PFF5-4602-24BLK
	Front Anti Roll Bar Bush 25mm	2	3	PFF5-4602-25BLK
	Front Anti Roll Bar Mounting Bush 27mm	2	3	PFF5-4602-27BLK
	Front Anti Roll Bar Mounting Bush 22.5mm	2	3	PFF5-503-225BLK
	Front Anti Roll Bar Mounting Bush 24mm	2	3	PFF5-503-24BLK
	Front Anti Roll Bar Mounting Bush 25mm	2	3	PFF5-503-25BLK
	Front Anti Roll Bar Mounting Bush 27mm	2	3	PFF5-503-27BLK
	Rear Anti Roll Bar Mounting Bush 13mm	2	4	PFR5-504-13BLK
	Rear Anti Roll Bar Mounting Bush 14mm	2	4	PFR5-504-14BLK
	Rear Roll Bar Mounting Bush 15mm	2	4	PFR5-504-15BLK
	Rear Roll Bar Mounting Bush 16.5mm	2	4	PFR5-504-165BLK
	Rear Lower Arm Front Bush	2	10	PFR5-710-10BLK
	Rear Lower Arm Rear Bush	2	11	PFR5-711-12BLK
	Rear Lower Arm Rear Bush	2	11	PFR5-711BLK
	Rear Upper Arm Inner Bush	2	12	PFR5-712BLK
	Rear Toe Adjust Inner Bush	2	13	PFR5-713BLK
	Rear Outer Integral Link Upper Bush  Click for fitting instructions	2	15	PFR5-715BLK
	Rear Outer Integral Link Lower Bush  Click for fitting instructions	2	16	PFR5-716BLK
	Rear Subframe Mounting Bush  Click for fitting instructions	4	20	PFR5-530BLK
	Rear Subframe Mounting Bush Insert	4	20	PFR5-531BLK
	Rear Diff Front Mounting Bush  Click for fitting instructions	1	25	PFR5-524BLK

	Rear Diff Front Mounting Bush Click for fitting instructions	1	25	PFR5-525BLK
	Rear Diff Rear Mounting Bush Click for fitting instructions	2	26	PFR5-526BLK
	Bump Stop Kit Click for fitting instructions	1		BS2003K