


BMW - E90, E91, E92 & E93 3 SERIES (2005-2013) - E90, E91, E92 & E93 3 SERIES (2005-2013)

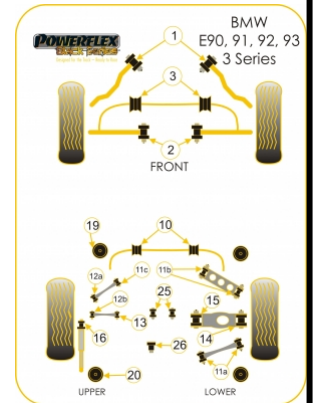

Notes

- These Bushes Do Not Fit The M3 or X Drive (4wd) Models
- PFR5-419, PFR5-421 and PFR5-423's are inserts to be used with the original bushes
- PFR5-420 and PFR5-422's are complete bushes and used to replace the original bushes
- PFR5-1220 increases anti squat to that of the M series, for std location of the subframe front mount use PFR5-420
- PFR5-421 Inserts fit petrol models only, and do not fit Touring E91 models.
- PFR5-423 Fits diesel cars and all petrol and diesel E91 Touring models.
- PFR5-416-12 fits performance shock absorber which has 12mm thread
- For standard shock absorbers and performance shock absorber with a 10mm thread use PFR5-416

PRODUCT PRICING INFORMATION


The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 Front Radius Arm To Chassis Bush	2	1	PFF5-401BLK
 Front Control Arm To Chassis Bush Click for fitting instructions	2	2	PFF5-402BLK
 Front Anti Roll Bar Mounting Bush 26.5mm	2	3	PFF5-4602-26.5BLK
 Rear Anti Roll Bar Mounting Bush 11mm	2	10	PFR5-4609-11BLK
 Rear Toe Adjust Arm Inner & Outer Bush	4	11a	PFR5-411BLK
 Rear Trailing Arm Inner & Outer Bush	4	11b	PFR5-411BLK
 Rear Upper Control Arm To Chassis Bush	2	11c	PFR5-411BLK
 Rear Upper Control Arm To Hub Bush	2	12a	PFR5-412BLK
 Rear Upper Lateral Arm To Hub Bush	2	12b	PFR5-412BLK
 Rear Upper Lateral Arm To Chassis Bush Click for fitting instructions	2	13	PFR5-413BLK
 Rear Lower Lateral Arm To Hub Bush	2	14	PFR5-414BLK
 Rear Lower Lateral Arm To Chassis Bush	2	15	PFR5-415BLK
 Rear Shock Absorber Upper Mounting Bush 12mm	2	16	PFR5-416-12BLK
 Rear Shock Absorber Upper Mounting Bush	2	16	PFR5-416BLK
 Rear Subframe, Front Bush Click for fitting instructions	2	19	PFR5-1220BLK
 Rear Subframe Front Mount Insert	2	19	PFR5-419BLK
 Rear Subframe Front Mounting Bush	2	19	PFR5-420BLK
 Rear Subframe Rear Mounting Insert	2	20	PFR5-421BLK
 Rear Subframe Rear Mounting Bush	2	20	PFR5-422BLK
 Rear Subframe Rear Mounting Insert	2	20	PFR5-423BLK
 Rear Diff Front Mounting Bush	2	25	PFR5-425BLK



Rear Diff Rear Mounting Bush

1

26

PFR5-426BLK