


## BMW - Z3 (1994 - 2002)

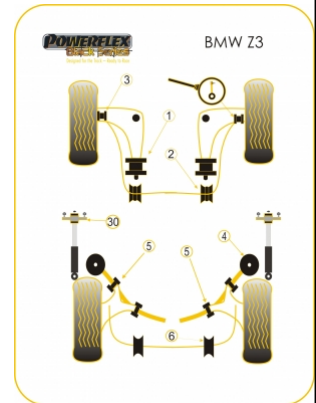

### Notes

- PFF5-303 is an eccentric bush for the M Series or where increased caster is required.
- Please check front and rear anti roll bar size before ordering.
- PFF5-304 is designed to fit models where the Anti Roll Bar joins the lower arm not the shock absorber. The will not fit the M' versions as a consequence.
- For the rear trailing arm use either PFR5-306 or on-car adjustable bushes PFR5-306G
- **PFR5-5630-10 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR5-5630-12 fits cars with aftermarket rear shock absorbers with a 12mm pin.**


### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 <b>Front Lower Wishbone Rear Bush</b>	2	1	<b>PFF5-301BLK</b>

	<b>Front Lower Wishbone Rear Bush Caster Offset</b> <a href="#">Click for fitting instructions</a>	2	1	PFF5-303BLK
	<b>Front Anti Roll Bar Mounting 23mm</b>	2	2	PFF5-310-23BLK
	<b>Front Anti Roll Bar Mounting 24mm</b>	2	2	PFF5-310-24BLK
	<b>Front Anti Roll Bar Mounting 25mm</b>	2	2	PFF5-310-25BLK
	<b>Front Anti Roll Bar Mounting 26mm</b>	2	2	PFF5-310-26BLK
	<b>Front Anti Roll Bar Mounting 27mm</b>	2	2	PFF5-310-27BLK
	<b>Front Anti Roll Bar Mounting 28mm</b>	2	2	PFF5-310-28BLK
	<b>Anti Roll Bar Link Rod Bush</b>	2	3	PFF5-304BLK
	<b>Rear Beam Bush</b>	2	4	PFR5-311BLK
	<b>Rear Trailing Arm Bush</b>	4	5	PFR5-306BLK
	<b>Rear Trailing Arm Bush Adjustable</b> <a href="#">Click for fitting instructions</a>	4	5	PFR5-306GBLK
	<b>Rear Anti Roll Bar Bush 14mm</b>	2	6	PFR5-504-14BLK
	<b>Rear Roll Bar Mounting Bush 15mm</b>	2	6	PFR5-504-15BLK
	<b>Rear Anti Roll Bar Bush 18mm</b>	2	6	PFR5-504-18BLK
	<b>Rear Diff Mounting Bush</b>	1	7	PFR5-300BLK
	<b>Rear Shock Top Mount Bracket and Bush 10mm</b> <a href="#">Click for fitting instructions</a>	2	30	PFR5-5630-10BLK
	<b>Rear Shock Top Mount Bracket and Bush 12mm</b> <a href="#">Click for fitting instructions</a>	2	30	PFR5-5630-12BLK