


BMW - Z4 (E85 & E86)

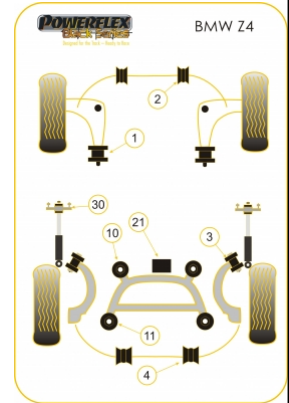






Notes:

PFR5-5630-10 fits cars with standard or aftermarket rear shock absorber with a 10mm pin, PFR5-5630-12 fits cars with aftermarket rear shock absorbers with a 12mm pin.

Product Pricing Information The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle. **Bush Price x Qty Per Car = Pack Price** In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 Front Wishbone Rear Bush, Aluminium Outer Click for fitting instructions	2	1	PFF5-5601-60BLK
 Front Wishbone Rear Bush, Aluminium Outer Click for fitting instructions	2	1	PFF5-5601BLK
 Front Wishbone Rear Bush, Caster Offset Click for fitting instructions	2	1	PFF5-5601G-60BLK
 Front Wishbone Rear Bush, Caster Offset Click for fitting instructions	2	1	PFF5-5601GBLK
 Front Wishbone Rear Bush	2	1	PFF5-4601-60BLK

	Front Wishbone Rear Bush	2	1	PFF5-4601BLK
	Front Anti Roll Bar Bush 24mm	2	2	PFF5-4602-24BLK
	Front Anti Roll Bar Bush 25mm	2	2	PFF5-4602-25BLK
	Front Anti Roll Bar Mounting Bush 27mm	2	2	PFF5-4602-27BLK
	Rear Trailing Arm Bush	2	3	PFR5-3608BLK
	Rear Roll Bar Mounting Bush 22.5mm	2	4	PFR5-4609-22.5BLK
	Rear Roll Bar Mounting Bush	2	4	PFR5-504-18BLK
	Rear Roll Bar Mounting Bush	2	4	PFR5-504-19BLK
	Rear Subframe Front Bush	2	10	PFR5-4610BLK
	Rear Subframe Front Bush Insert	2	10	PFR5-4612BLK
	Rear Subframe Front Bush Insert	2	10	PFR5-4614BLK
	Rear Subframe Rear Bush	2	11	PFR5-4611BLK
	Rear Subframe Rear Bush Insert	2	11	PFR5-4613BLK
	Rear Diff Front Mount Click for fitting instructions	1	21	PFR5-4621BLK
	Rear Diff Rear Bush Click for fitting instructions	1	26	PFR5-4626BLK
	Rear Shock Top Mount Bracket and Bush 10mm Click for fitting instructions	2	30	PFR5-5630-10BLK
	Rear Shock Top Mount Bracket and Bush 12mm Click for fitting instructions	2	30	PFR5-5630-12BLK