


## BMW - 1502-2002 (1962 - 1977)

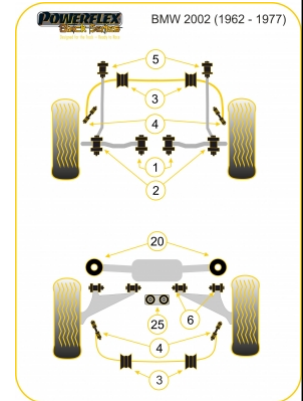

### Notes

- PFF5-2003-15 and PFF5-2003-16 anti-roll bar bushes fit both front and rear.
- PFF5-2004 anti-roll bar link rod bush fits both the front and rear.
- PFR5-2020 are inserts which fit into the voids of the original rear beam bush.
- PFR5-2021 is a complete bush for the rear beam mount.
- Please check Anti-roll bar diameter before ordering.

### PRODUCT PRICING INFORMATION



















The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
------------------	------------------	-------------------	-------------

	<b>Front Lower Arm Inner Bush</b>	2	1	PFF5-2001BLK
	<b>Front Lower Arm Outer Bush</b>	2	2	PFF5-2002BLK
	<b>Front Anti Roll Bar Bush 15mm</b>	2	3	PFF5-2003-15BLK
	<b>Rear Anti Roll Bar Bush 15mm</b>	2	3	PFF5-2003-15BLK
	<b>Front Anti Roll Bar Bush 16mm</b>	2	3	PFF5-2003-16BLK
	<b>Rear Anti Roll Bar Bush 16mm</b>	2	3	PFF5-2003-16BLK
	<b>Front Anti Roll Bar Link Rod Bush</b>	2	4	PFF5-2004BLK
	<b>Rear Anti Roll Bar Link Rod Bush</b>	2	4	PFF5-2004BLK
	<b>Tie Bar To Chassis Front Bush</b>  Click for fitting instructions	2	5	PFF5-2005BLK
	<b>Rear Trailing Arm Bush</b>	4	6	PFR5-306BLK
	<b>Rear Trailing Arm Bush Adjustable</b>  Click for fitting instructions	4	6	PFR5-306GBLK
	<b>Rear Beam Mount Bush Inserts</b>  Click for fitting instructions	2	20	PFR5-2020BLK
	<b>Rear Beam Mount Bush</b>  Click for fitting instructions	2	20	PFR5-2021BLK
	<b>Rear Diff Rear Mounting Bush</b>	2	25	PFR5-2025BLK