

# 850, S70, V70 UP TO 2000

#### PRICING INFORMATION

The prices shown on our website are per bush.


To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

#### **Bush Price x Qty Per Car = Pack Price**

#### Notes

- PFF88-101 Does Not Fit All Wheel Drive, Diesel Or Police Models
- PFF88-106 Fits Petrol Models Only With The Later Superseded Bracket Volvo Supply As A Replacement For All Models Or Fitted As Standard To 70 Series Year 1999 To 2000 (50mm Diameter Bush)
- PFF88-107 Fits Petrol Models With The Original Bracket (36mm Diameter Bush)
- PFR 88-901 Fits Front Wheel Drive Vehicles Only

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

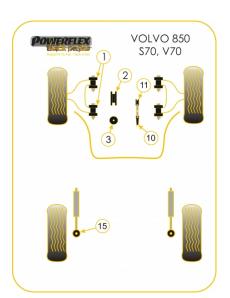



### **POWERALIGN CAMBER BOLT KIT (12MM)**

Qty Per Car **1** Diagram Ref.

Part No. **PFA100-12** 



#### FRONT WISHBONE LOWER BUSH

Qty Per Car 4 Diagram Ref. 1 Part No. PFF88-101BLK



#### FRONT UPPER ENGINE MOUNTING

Qty Per Car 1 Diagram Ref. 2 Part No. PFF88-105BLK



### FRONT UPPER BULKHEAD MOUNT 50MM

Qty Per Car 1 Diagram Ref. 3 Part No. PFF88-106BLK



#### FRONT UPPER BULKHEAD MOUNT 36MM

Oty Per Car 1 Diagram Ref. 3 Part No. PFF88-107BLK



#### FRONT LOWER ENGINE TIE BAR LARGE BUSH

Qty Per Car 1 Diagram Ref. 10 Part No. PFF88-711BLK



#### FRONT LOWER ENGINE MOUNT SMALL BUSH

Oty Per Car 1 Diagram Ref. 11 Part No. PFF88-611BLK



## **REAR LOWER SHOCK BUSH**

Qty Per Car **2** Diagram Ref. **15** 

Part No. PFR88-901BLK