

V60 (2011 ON)

The prices shown on our website are per bush.


To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

- PFF88-1030 fits all 5 and 6 cylinders Volvo engines, D3 & D4 2L Diesel engines, T4 2L Petrol engine and 5T 2.5L engines.
- Please check front and rear anti-roll bar size before ordering.

PFF19-1925 FITS LOWER ENGINE MOUNT WITH THIS PROFILE ONLY



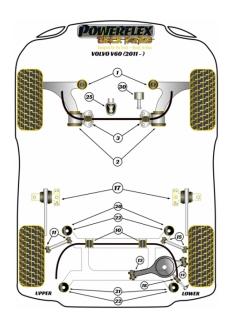

Part No. PFF19-1901BLK

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.



FRONT ARM FRONT BUSH

Qty Per Car 2 Diagram Ref. **01**



FRONT ARM REAR BUSH

Qty Per Car 2 Diagram Ref. 2 Part No. **PFF19-1902BLK**



FRONT ANTI ROLL BAR TO CHASSIS BUSH 22MM

Qty Per Car 2 Diagram Ref. 3 Part No. **PFF19-1603-22BLK**



REAR ANTI-ROLL BAR BUSH

Qty Per Car 2 Diagram Ref. 10 Part No. PFR19-1910-20.3BLK



REAR UPPER ARM BUSH

Qty Per Car 4 Diagram Ref. 11 Part No. PFR19-1911BLK



REAR LOWER ARM INNER BUSH

Qty Per Car 2 Diagram Ref. 13 Part No. PFR19-1913BLK



REAR LOWER ARM OUTER BUSH

Qty Per Car 2

Diagram Ref. 14

Part No. PFR19-1914BLK



REAR TOE LINK ARM BUSH

Qty Per Car 4

Diagram Ref. 15

Part No. PFR19-1915BLK



REAR TRAILING ARM BUSH

Qty Per Car 2

Diagram Ref. 17

Part No. PFR19-1917BLK



REAR ANTI ROLL BAR TO LINK ROD BUSH

Qty Per Car 2

Diagram Ref. 18

Part No. PFR19-1918BLK



REAR SUBFRAME FRONT BUSH INSERTS

Qty Per Car 2

Diagram Ref. 20

Part No. PFR19-1920BLK



REAR SUBFRAME REAR BUSH INSERTS

Qty Per Car 2

Diagram Ref. 21

Part No. PFR19-1921BLK



REAR SUBFRAME BUSH

Qty Per Car 4

Diagram Ref. 22

Part No. PFR19-1922BLK



LOWER ENGINE MOUNT INSERT

Qty Per Car 1

Diagram Ref. 25

Part No. PFF19-1925BLK



TORQUE ROD INSERT

Qty Per Car 1

Diagram Ref. 30

Part No. PFF88-1030BLK