



XC60 (2009 ONWARDS)



The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

- PFF88-1030 fits all 5 and 6 cylinders Volvo engines, D3 & D4 2L Diesel engines, T4 2L Petrol engine and 5T 2.5L engines.
- Please check front and rear anti-roll bar size before ordering.

PFF19-1925 FITS LOWER ENGINE MOUNT WITH THIS PROFILE ONLY

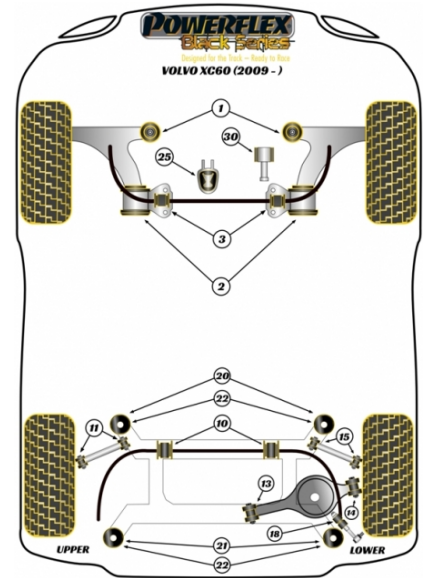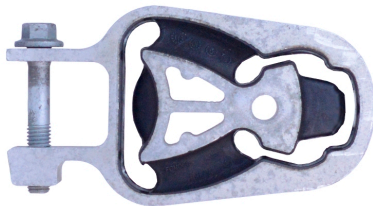

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.



FRONT ARM FRONT BUSH

Qty Per Car 2

Diagram Ref. **01**

Part No. **PFF19-1901BLK**



FRONT ARM REAR BUSH

Qty Per Car 2

Diagram Ref. **2**

Part No. **PFF19-1902BLK**



FRONT ANTI ROLL BAR TO CHASSIS BUSH 22MM

Qty Per Car 2

Diagram Ref. **3**

Part No. **PFF19-1603-22BLK**



REAR ANTI-ROLL BAR BUSH

Qty Per Car 2

Diagram Ref. **10**

Part No. **PFR19-1910-20.3BLK**



REAR UPPER ARM BUSH

Qty Per Car 4

Diagram Ref. **11**

Part No. **PFR19-1911BLK**



REAR LOWER ARM INNER BUSH

Qty Per Car 2

Diagram Ref. **13**

Part No. **PFR19-1913BLK**



REAR LOWER ARM OUTER BUSH

Qty Per Car **2**

Diagram Ref. **14**

Part No. **PFR19-1914BLK**



REAR TOE LINK ARM BUSH

Qty Per Car **4**

Diagram Ref. **15**

Part No. **PFR19-1915BLK**



REAR ANTI ROLL BAR TO LINK ROD BUSH

Qty Per Car **2**

Diagram Ref. **18**

Part No. **PFR19-1918BLK**



REAR SUBFRAME FRONT BUSH INSERTS

Qty Per Car **2**

Diagram Ref. **20**

Part No. **PFR19-1920BLK**



REAR SUBFRAME REAR BUSH INSERTS

Qty Per Car **2**

Diagram Ref. **21**

Part No. **PFR19-1921BLK**



REAR SUBFRAME BUSH

Qty Per Car **4**

Diagram Ref. **22**

Part No. **PFR19-1922BLK**



LOWER ENGINE MOUNT INSERT

Qty Per Car **1**

Diagram Ref. **25**

Part No. **PFR19-1925BLK**



TORQUE ROD INSERT

Qty Per Car **1**

Diagram Ref. **30**

Part No. **PFR88-1030BLK**
