


## VOLKSWAGEN - GOLF MODELS - GOLF MK2 (1985 - 1992) - 2WD

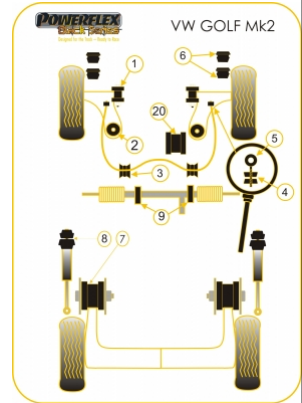

### Notes

- For power steering mount bushes please measure the width of bracket and select the correct part number.
- PFF85-232 is suitable for vehicles with a 18.5mm wide bracket.
- PFF85-233 is suitable for vehicles with a 15mm wide bracket.
- PFF85-244 & PFF85-245 don't fit vehicles with engine codes KR, PL, 9A and PG fitted with a hydro type mounting bush



### PRODUCT PRICING INFORMATION

The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

**Bush Price x Qty Per Car = Pack Price**

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 <b>PowerAlign Camber Bolt Kit (12mm)</b> Click for fitting instructions	1		<b>PFA100-12</b>
 <b>Front Wishbone Front Bush</b>	2	1	<b>PFF85-201BLK</b>

	Front Wishbone Inner Bush (Rear)	2	2	PFF85-203BLK
	Front Anti Roll Bar Bush 20mm	2	3	PFF85-205-20BLK
	Front Anti Roll Bar Bush Eibach 22mm	2	3	PFF85-205-22BLK
	Front Anti Roll Bar Mount 18mm	2	3	PFF85-205BLK
	Front Eye Bolt Mounting Bush 10mm	2	4	PFF85-208-10BLK
	Front Eye Bolt Mounting Bush	2	4	PFF85-208BLK
	Front Anti Roll Bar Eye Bolt Bush 20mm	2	5	PFF85-209-20BLK
	Front Anti Roll Bar Eye Bolt Bush 18mm	2	5	PFF85-209BLK
	Front Anti Roll Bar Eye Bolt Bush Eibach 22mm	2	5	PFF85-210-22BLK
	Front Subframe Mounts	4	6	PFF85-250BLK
	Rear Beam Mounting Bush	2	7	PFR85-207BLK
	Rear Shock Top Mounting Bush	2	8	PFR85-240BLK
	Power Steering Rack Mount	1	9	PFF85-232BLK
	Rear Lower Engine Mount Bush	1	20	PFF85-244BLK
	Rear Lower Engine Mount Insert	1	20	PFF85-245BLK
	Non Power Steering Rack Mount	2	9	PFF85-231BLK
	Power Steering Rack Mount	1	9	PFF85-233BLK
	<b>Bump Stop, VW Front</b> Click for fitting instructions	2		BS006
	<b>Bump Stop, VW Rear</b> Click for fitting instructions	2		BS008
	Exhaust Mounts	1		EXH006
	<b>Bump Stop Kit</b> Click for fitting instructions	1		BS2001K
	<b>Bump Stop Kit</b> Click for fitting instructions	1		BS2005K

