


VOLKSWAGEN - GOLF MODELS - GOLF MK3 (1992 - 1998) - GOLF MK3 2WD (1992 - 1998)

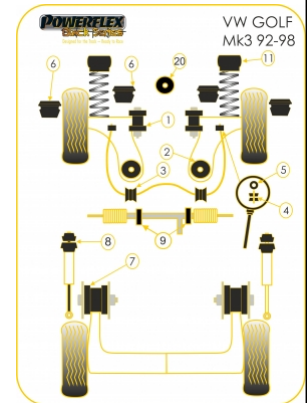

Notes

- PFF85-208 & PFF85-209 Will Not Fit The VR6 Models
- For power steering mount bushes please measure the width of bracket and select the correct part number.
- PFF85-232 is suitable for vehicles with a 18.5mm wide bracket.
- PFF85-233 is suitable for vehicles with a 15mm wide bracket.
- PFF85-239 is suitable for Golf Mk3 models from 1992 to 1996 with 5 stud wheels only, this includes GTi, GTi 16v & VR6. From 1996 to 1998 they fit all Mk3 Golfs.


PRODUCT PRICING INFORMATION


The prices shown on our website are per bush.

To get the total pack price you will need to multiple this price by the number of bushes per vehicle.

Bush Price x Qty Per Car = Pack Price

In addition to the Black Series parts listed please check the Road Series website for other bushes suitable for this car such as engine or transmission mountings.

Bush description	Quantity Per Car	Diagram Reference	Part Number
 PowerAlign Camber Bolt Kit (12mm) Click for fitting instructions	1		PFA100-12

	Front Wishbone Front Bush	2	1	PFF85-201BLK
	Front Wishbone Rear Bush Click for fitting instructions	2	2	PFF85-204BLK
	Front Anti Roll Bar Mount 20mm	2	3	PFF85-205-20BLK
	Front Anti Roll Bar Mount 18mm	2	3	PFF85-205BLK
	Front Eye Bolt Mounting Bush 10mm	2	4	PFF85-208-10BLK
	Front Eye Bolt Mounting Bush	2	4	PFF85-208BLK
	Front Anti Roll Bar Eye Bolt Bush 20mm	2	5	PFF85-209-20BLK
	Front Anti Roll Bar Eye Bolt Bush 18mm	2	5	PFF85-209BLK
	Front Subframe Mounts	4	6	PFF85-250BLK
	Rear Beam Mounting Bush	2	7	PFR85-206BLK
	Rear Shock Top Mounting Bush	2	8	PFR85-240BLK
	Non Power Steering Rack Mount	2	9	PFF85-231BLK
	Power Steering Rack Mount	1	9	PFF85-232BLK
	Power Steering Rack Mount	1	9	PFF85-233BLK
	Front Strut, Top Mount	2	11	PFF85-239BLK
	Front Lower Engine Mounting Bush & Inserts Click for fitting instructions	1	20	PFF85-280BLK
	Bump Stop, VW Front Click for fitting instructions	2		BS006
	Bump Stop, VW Rear Click for fitting instructions	2		BS008
	Exhaust Mounts	1		EXH006
	Bump Stop Kit Click for fitting instructions	1		BS2001K
	Bump Stop Kit Click for fitting instructions	1		BS2005K